

E 3 0 0 0 S Y S T E M

The standard colours of Clipsal E3000 system are Grey Silver (GS) or white (WW) which incorporate blue and white LED respectively. Apart from the LED models, fluorescent indication switches are also available for options to match different decor design.

- Large and horizontal dolly for easy operation
- Built-in LED or fluorescent as an orientating indicator
- Cross-type structural support to provide extra rigidity to flush plate
- Polycarbonate finishes for durable use and much safer

**SPECIAL
ORDER**
Extended lead times
may apply.





E3031H1 EBGs



E3032H1 EBGs



E3033H1 EBGs



E3034H1 EBGs



E3031H1 FWWW



E3032H1 FWWW



E3033H1 FWWW



E3034H1 FWWW



E3031HBP GS



E3031HBP WW



E3031HD20 EBGs



E3031HD20 EWWW

FLUSH SWITCHES WITH LED

E3031H1 EBGs or EWWW
10A 1 gang 1 way switch

E3031H2 EBGs or EWWW
10A 1 gang 2 way switch

E3032H1 EBGs or EWWW
10A 2 gang 1 way switch

E3032H2 EBGs or EWWW
10A 2 gang 2 way switch

E3033H1 EBGs or EWWW
10A 3 gang 1 way switch

E3033H2 EBGs or EWWW
10A 3 gang 2 way switch

E3034H1 EBGs or EWWW
10A 4 gang 1 way switch

E3034H2 EBGs or EWWW
10A 4 gang 2 way switch

WHITE FLUSH SWITCHES WITH FLUORESCENT INDICATOR

E3031H1 FWWW
10A 1 gang 1 way switch

E3031H2 FWWW
10A 1 gang 2 way switch

E3032H1 FWWW
10A 2 gang 1 way switch

E3032H2 FWWW
10A 2 gang 2 way switch

E3033H1 FWWW
10A 3 gang 1 way switch

E3033H2 FWWW
10A 3 gang 2 way switch

E3034H1 FWWW
10A 4 gang 1 way switch

E3034H2 FWWW
10A 4 gang 2 way switch

BELL PUSH BUTTON SWITCHES

E3031HBP GS or WW
4A bell push marked with bell symbol

DOUBLE POLE SWITCHES WITH LED

E3031HD20 EBGs or EWWW
20A double pole flush switch



 
APPLIANCE SWITCHES WITH/WITHOUT LED

E3031DR32 GS or WW
32A double pole switch without LED

E3031DR45 GS or WW
45A double pole switch without LED


E3031DR32 EBGs or EWWW
32A double pole switch with LED

E3031DR45 EBGs or EWWW
45A double pole switch with LED

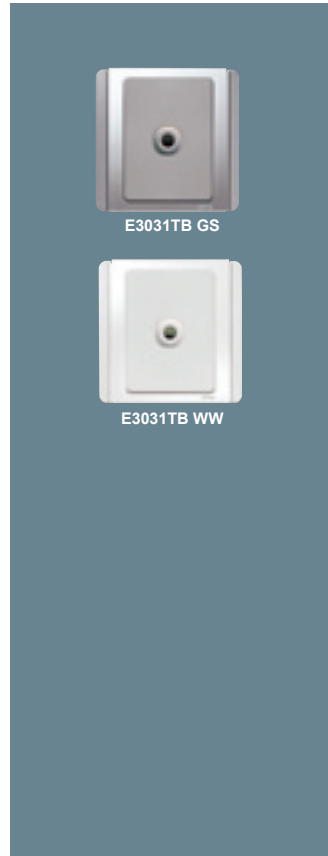

CONNECTION UNIT

 E3031TB GS or WW
25A connection unit

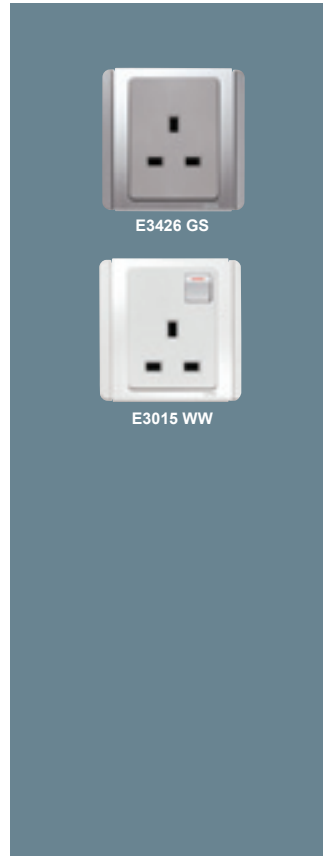

FLUSH SINGLE SOCKET OUTLETS

E3426 GS or WW
13A 3 pin socket outlet

E3015 GS or WW
13A 3 pin switched socket outlet

E3015D EBGs or EWWW
13A 3 pin switched socket outlet with LED



FLUSH TWIN SOCKET OUTLETS

ET3426 GS or WW
13A twin 3 pin socket outlet

ET3025 GS or WW
13A twin 3 pin switched socket outlet

ET3025D EBGs or EWWW
13A twin 3 pin switched socket outlet with LED

 





E3031TV GS



E3032VTV WW

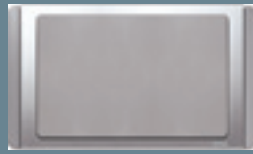

E3030X GS

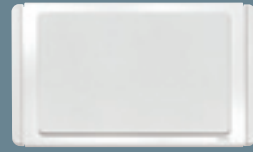 

ET3030X WW

**TV/FM CO-AXIAL
OUTLETS**

E3031TV GS or WW

1 gang TV socket outlet

E3032VTV GS or WW

2 gang vertical TV socket outlet

FLUSH PLATES

E3030X GS or WW

1 gang blank plate

ET3030X GS or WW

2 gang blank plate

GAINSBOROUGH